

(DIN 96 × 48: Watertight Cover)

WP3 Procedure for mounting


Protective construction : IP66, NEMA4 (For indoor use)

Use the meter after mounting the watertight cover as shown in the following.

Strongly push the watertight cover in the arrow direction shown in the figure on the lower right side, then tighten it with the knurled screw.

Knurled screw tightening torque: Approx. $0.29\text{N} \cdot \text{m}$ (3kgf · cm)

[Mounting bracket tightening torque: 0.3 to $0.49\text{N} \cdot \text{m}$ (4 to 5 kgf · cm)]

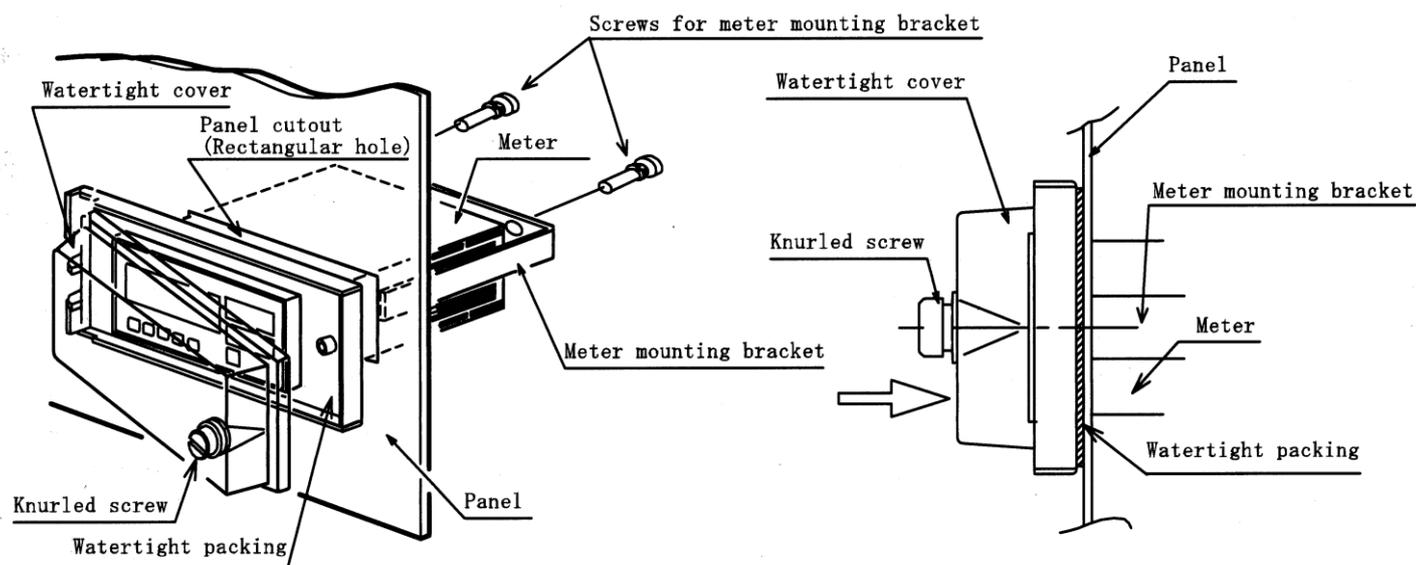

Note: After the watertight cover is mounted, check that there is no gap between the cover and panel.

(As the watertight packing may deteriorate with the lapse of time, periodically check its watertightness)

watanabe

WATANABE ELECTRIC INDUSTRY CO., LTD.

6-16-19, Jingumae, Shibuya-ku, Tokyo 150-0001, Japan

Phone: (81)3-3400-6141

Homepage <http://www.watanabe-electric.co.jp/en/>